

Carrington Trim Series Carrington Trim Series with TA-10 Flow Control Spindle & T-12A Cap Assembly

Installation & Operation Instructions

Model Numbers

TRIM ONLY

S-4400-TRM Shower Valve Trim

S-4401-TRM Shower Trim

S-4402-TRM Tub/Shower Trim

S-4404-TRM

Tub/Hand Shower Trim

S4408TRM

Shower/Hand Shower Trim

TRIM, TA-10, T-12A

S4400TRMTC

Shower Valve Trim

S4401TRMTC

Shower Trim

S4402TRMTC

Tub/Shower Trim

S4404TRMTCTub/Hand Shower Trim

S4408TRMTC

Shower/Hand Shower Trim



-12A TA-10



S-4400-TRM S4400TRMTC



S-4401-TRM S4401TRMTC



S-4402-TRM S4402TRMTC

Compliance

ASME A112.18.1/CSA B125.1



Warranty

Limited Lifetime - to the original end purchaser in consumer/residential installations.

5 Years - for industrial/commercial installations. Refer to www.symmons.com/warranty for complete warranty information.

Go to www.symmons.com/register to register your Symmons product.



S-4404-TRM S4404TRMTC



S4408TRM S4408TRMTC


1. Recommended Tools

 FIGURE 1














Adjustable Wrench Allen Wrench (3mm)

Phillips Screwdriver

Safety Glasses

Thread Seal Tape

2. Dimensions

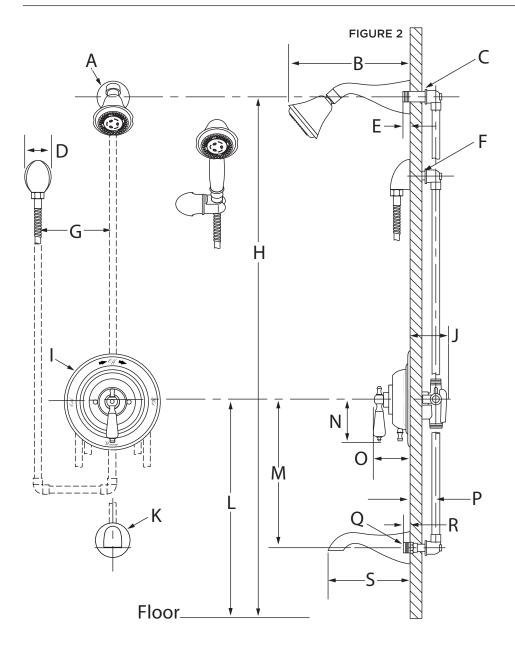


Measurements				
Α	Ø 2-5/8", 67 mm			
В	9-1/4", 235 mm			
С	1/2" NPT			
C D	2-1/8", 54 mm			
Е	1/2", 13 mm			
F	Male 1/2" IPS thread must be recessed 1/4" from finished wall			
G	6", 152 mm right or left			
Н	77", 1956 mm			
I	Ø 7-1/2", 191 mm			
J	3-1/2", 89 MM			
K	Ø 2-5/8", 67 mm			
L	Trim with tub spout: Ref. 32", 813 mm Trim without tub spout: Ref. 42", 1067 mm			
М	12", 305 mm			
N	3-1/8", 79 mm			
0	2-3/4", 70 mm			
Р	(Rough in) 2" ± 1/2", 51 mm ± 13 mm			
Q	1/2" NPT			
R	1/2", 13 mm			
S	6-1/2", 165 mm			

Notes

- 1) Valve body and piping not included and shown as reference only.
- 2) Plaster shield (p/n T-176) for dry wall, plaster or other type walls 1/2" or greater.
- 3) All dimensions measured from nominal rough-in (see P as reference).
- 4) Dimensions subject to change without notice.

3. Parts Breakdown (Model Numbers Ending in TRMTC)

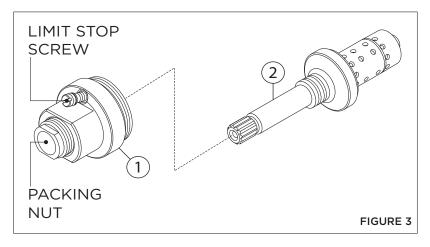

Replacement Parts			
Item	Description	Part Number	
1	Cap Assy.	T-12A	
2	Flow Control Spindle	TA-10	

IMPORTANT: Model numbers ending in **TRMTC** coordinate with Temptrol pressure balancing valves ordered with Test Cap. The Test Cap is used to allow pressurization of system. **Do not** remove test cap from valve during wall construction, installation of valve or pressurization of system.


MARNINGS:


- Test cap rated for pressure testing up to 200 psi maximum. DO NOT exceed 200 psi while pressure testing valve body.
- Do not expose valve with test cap to heat for longer than 2 minutes when soldering copper tubing. Doing so may damage the internal components of the valve and will void the product warranty.
- 3. Ensure test cap is re-torqued to **30 lb-ft** after soldering valve body.

4. Installation - Remove Test Cap (Model Numbers Ending in TRMTC)

Flow control spindle (TA-10) and cap assembly (T-12A) will come factory assembled for all model numbers ending in **TRMTC**. When ready to remove Test Cap and install trim, follow the instructions below:

- Check for leaks around the valve assembly and all pipe fittings.
- 2) Remove test cap from valve (FIGURE 4.1).
- 3) If system is dirty, flush valve.
- 4) Thread flow control spindle and cap assembly into valve body. Turn clockwise to secure to valve (FIGURE 4.2).

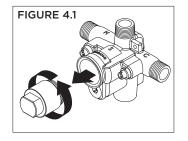

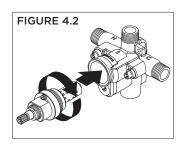

5. Installation - Adjust Packing Nut (Model Numbers Ending in TRMTC)

- 1) Turn hot and cold supplies on. Valve will not operate unless both hot and cold water supply pressures are on.
- 2) Place handle over flow control spindle.
- 3) Tighten packing nut for positive frictional resistance as handle is rotated from shut-off position across adjustment range.


6. Installation - Setting Limit Stop Screw (Model Numbers Ending in TRMTC)

The temperature limit stop screw limits valve handle from being turned to maximum position resulting in excessive hot water discharge temperatures.

WARNING: Failure to adjust limit stop screw properly may result in serious scalding.

- 1) Turn hot and cold supplies on. Valve will not operate unless both hot and cold water supply pressures are on.
- 2) Place handle on flow control spindle and open valve to maximum desired temperature.
- 3) Turn limit stop screw clockwise until it seats.

7. Parts Breakdown

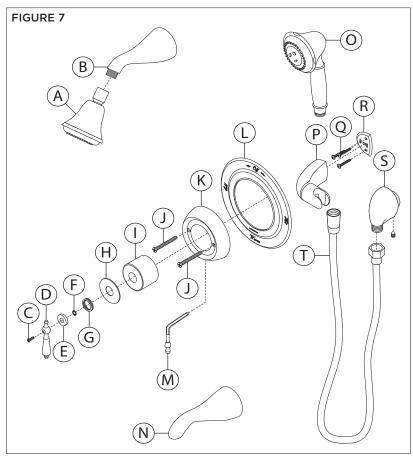



*Order in-line vacuum breaker (EF-109) for hand shower systems without dual checks.

Replacement Parts					
Item	Description	Part Number			
Α	Showerhead	442SH			
В	Shower Arm	304			
С	Set Screw				
D	Handle	DE 20 LDO			
E	Flange	DF-28-LPO			
F	O-ring				
G	Lock Nut	T-20-PL			
Н	Washer	40B-PL			
I	Dome Cover	DF-11			
J	Mounting Screws	DF-14-SL			
K	Escutcheon				
L	Shower Plate	7.5-ETCH			
М	Diverter/Volume	DF-21/22			
1*1	Control Handle	DF-21/22			
N	Tub Spout	063			
0	Hand Shower	442W			
Р	Wall Cradle				
Q	Screws	EF-106			
R	Mounting Plate				
S	Wall Elbow	EF-105			
Т	60" Hose	RTS-045			


Notes:


- 1) Append appropriate suffix for premium finish.
- 2) Append appropriate flow rate to showerhead or hand shower for low flow.
- 3) Apply a bead of silicone around the perimeter of all shower trim installed flush to the finished wall. Leave opening on bottom of escutcheons for weep hole.
- 4) Apply plumber tape to all threaded connections.


8. Installation - Shower Valve Trim

- 1) Place diverter/volume control handle into slot in shower escutcheon (FIGURE 8.1).
- 2) Secure escutcheon and shower plate to Temptrol pressure balancing valve using mounting screws. Guide handle into control port on valve body (FIGURE 8.2).
- 3) Install dome cover and washer to valve. Secure with lock nut by by turning clockwise (FIGURE 8.3).
- 4) Place o-ring in groove under spindle broach. Install flange and handle to shower valve. Secure with screw (FIGURE 8.4).



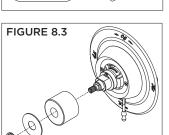


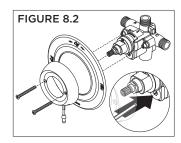


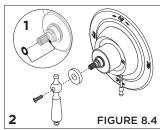


9. Installation - Showerhead & Tub Spout

- 1) Attach shower arm to stub out pipe. Turn clockwise to tighten (FIGURE 9.1).
- 2) Install showerhead to shower arm. Turn clockwise to tighten (FIGURE 9.2).
- 3) Install tub spout to stub out pipe. Turn clockwise to tighten (FIGURE 9.3).

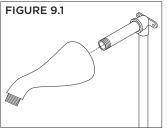

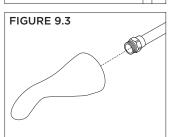

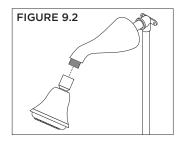



10. Installation - Slide Bar Assembly


1) Place mounting plate in position. Mark and drill 3/16" holes for tile anchors, 5/16" holes for drywall anchors. Install anchors (FIGURE 10.1).


Note: For dry wall 1/2" thick or less, insert anchor tool into drywall anchor to secure behind wall prior to installing wall cradle.


- 2) Remove cover of hand shower cradle. Install cradle and mounting plate. Secure with three screws. Replace cover on hand shower cradle (FIGURE 10.2).
- 3) Install wall elbow to stub out pipe. Tighten set screw to secure (FIGURE 10.3).
- 4) Attach small end of hand shower hose to wall elbow. Turn clockwise to tighten (FIGURE 10.4).
- 5) Attach large end of hand shower hose to hand shower wand. Turn clockwise to tighten (FIGURE 10.5).

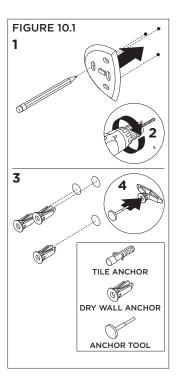

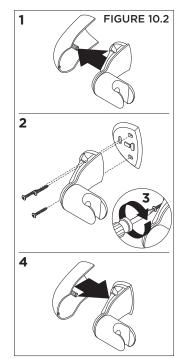

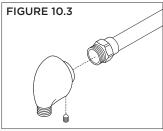


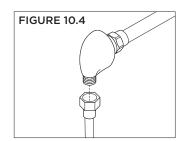


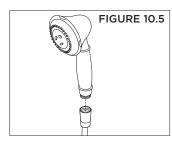


11. Operation (Temperature Control)

 - 1) Turn shower handle counter-clockwise approximately 1/4 turn to put valve in cold position (FIGURE 11.1).
- 2) Turn shower handle counter- clockwise approximately 1/2 turn to put valve in warm position (FIGURE 11.2).
- 3) Turn shower handle counter- clockwise approximately 3/4 turn to put valve in hot position (FIGURE 11.3).

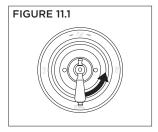




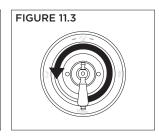

12. Operation (VersaFlex™ Diverter Control)

Turn diverter control handle clockwise to divert to **tub spout** or other Symmons **accessory**.


Turn diverter control handle counterclockwise to divert to **shower** or other Symmons **accessory**.

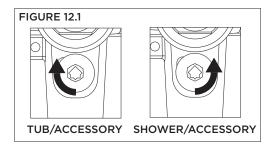

13. Operation (Volume Control)

Turn volume control handle clockwise to **increase** volume.

Turn volume control handle counterclockwise to **decrease** volume.

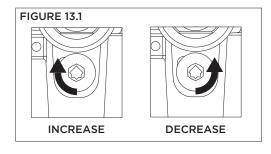

14. Troubleshooting Chart

Problem	Cause	Solution
Finish is spotting.	Elements in water supply may cause water staining on finish.	Clean finished trim area with a soft cloth using mild soap and water or a non-abrasive cleaner and then quickly rinse with water.