


Front Wind Baffle Installation Instructions


Galvanized, powder coated front wind baffles

The front wind baffle is designed to be placed on the fan (discharge) side of Samsung condensing units. For outdoor unit compatibility details, please refer to supporting technical documents at www.SamsungHVAC.com

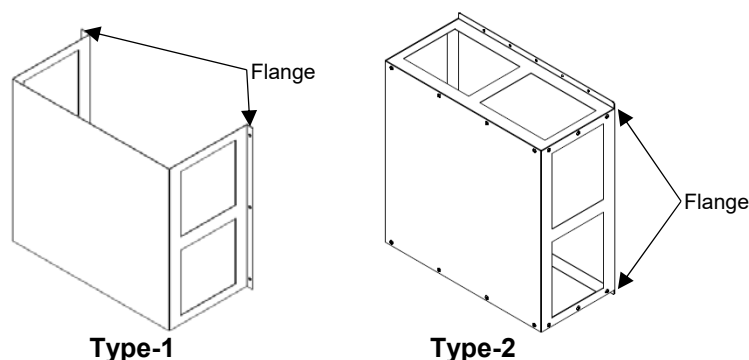

INSTALLATION

1. This baffle is used for various condensing unit models. Before installing the wind baffle, inspect inside the condensing unit to verify proximity of the condenser coil and wires to the sheet metal cabinet. **CARE MUST BE TAKEN TO NOT PUNCTURE THE COIL OR DAMAGE WIRES WITH WIND BAFFLE SCREWS.** Also take care not to penetrate internal chassis partitions.
2. Align the baffle with the fan outlet on the front of the condensing unit. Carefully place the baffle against the outdoor unit. For Type-1 baffles, the flanges will install vertically. For Type-2 baffles, the flanges may install horizontally (above the fan outlet) or vertically (left and right of fan outlet) depending on the condensing unit model.

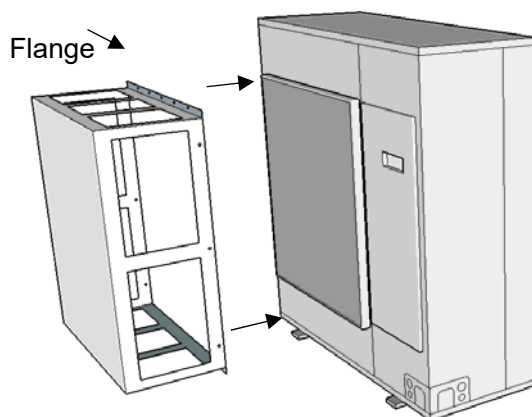

3. Carefully install the provided screws. Type-2 baffles have screw holes on the side of the baffle (in addition to the flange). If installing on a condensing unit with a square fan guard, also install screws through the baffle into the fan guard for added support.

